



# **KNEGT<sup>®</sup>**

## **AG TO GO**



### **QUICK USER GUIDE KNEGT ELECTRIC TRACTOR**

**304G2E / 404G2E**



**[knegt-usa.com](http://knegt-usa.com)**




# CLUTCH



Double clutch.  
First phase disengage gearbox.  
Second phase disengage PTO.

# STARTING THE ENGINE

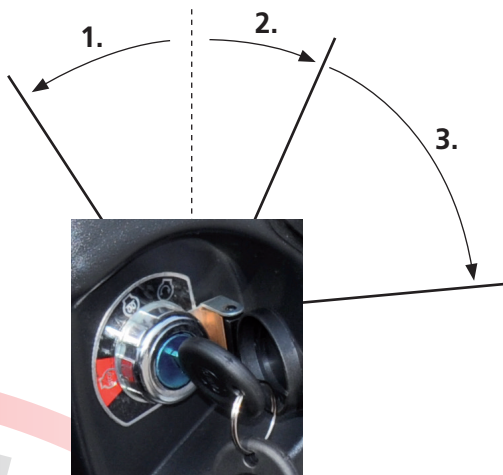

## Starting in 3 Steps:

1. Hand throttle all the way forward.
2. Press the clutch pedal all the way down.
3. Turn the ignition key three positions forward and hold until the engine runs.

## Turn off:

1. Press the clutch pedal all the way down.
2. **PAY ATTENTION!** Put the directional lever in neutral before turning off the engine !!

# CONTROL IN THE TRACTOR



1. **Direction lever.** (with usage of the clutch pedal)
2. **Hand throttle lever.**

# CONTROL IN THE TRACTOR




1. **Gear lever.**
2. **Rear lift lever.**
3. **Low/High gear lever.** (Easily engaged or disengaged by driving gently forward or backwards.)
4. **PTO lever.** Engage or disengage the PTO. *PLEASE NOTE!* When starting, the lever must be in the neutral position.
5. **2WD/4WD lever.** (Easily pull up or press down by driving gently forward or backwards with the steering wheel in straight position.)

# CONTROL BEHIND THE TRACTOR



1. Quick release couplers.

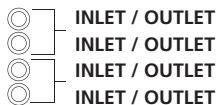

2. PTO, which can be switched on, only starts to rotate when the Clutch pedal is being released.
3. Trailerplug.

## POWER PACK



Remove the hood key from the holder.



Place the key in the hole in the hood and push the key to the right to unlock the hood. Close the hood by pushing it down into the lock. Insert the key back into the holder.



You can turn off the power pack. This is not necessary although when putting away for a long time or maintenance it is desirable.

To turn off the power pack, you must hold the button for 10 sec. Repeat this to switch the power pack back on.

# POWER PACK CHARGER

Make sure the ignition is off before starting to charge the tractor.




Put the plug in the socket at the top on the hood and turn on the charger.

When the power pack is charged, the charger stops automatically with charging.



# LUBRICANTS

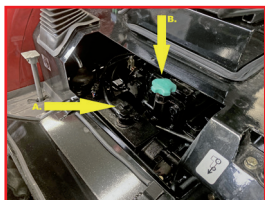


**A: Hydraulic oil 10W30 (API GL-4)**


← Knecht 304G2E. - 20 liter

Knecht 404G2E. - 25 liter

**B: Reduce Valve**

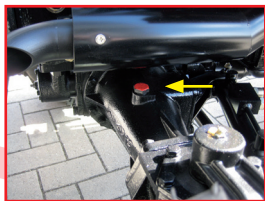

← **Hydraulic oil 10W30 (API GL-4)**

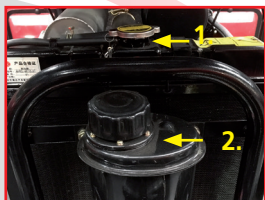

**1. Coolant**

Knecht 304G2E. - 8 liter

← Knecht 404G2E. - 10 liter

**2. Hydraulic oil 10W30 (API GL-4)**

 
**Service interval: 1 year of 350 hours**





# **KNEGT<sup>®</sup>**

## **AG TO GO**



**X**



**NORTH AMERICA**

**Ag To Go, LLC**

245 Summit Point Dr Ste 3

Henrietta, NY 14467

877-978-5477

info@agtogo.com

**knegt-usa.com**